

## Run-Screen Fields

Display Screen	Actual Count 1 Up	Actual Count 1 Down	Actual Count 2	Actual Rate	Target Rate	Target Count	Count Percent	Rate Percent	Percent Complete	Current Downtime	Total Downtime	Downtime Status	Total (job/shift)	Total-Actual	Average Rate	Count 1 minus Count 2	Current Run Time	Total Run Time	Shift Downtime	Distance	Net Percent	Run Time	Actual Hourly Count	Target Hourly Count	Hourly Count Percent	Downtime Percent
SC 1	X	X															X				X					
SC 2	X	X	X														X				X					
SC 3	X				X												X				X					
SC 4			X	X													X				X					
SC 5			X	X													X	X			X					
SC 6	X	X	X						X								X				X					
SC 7	X		X														X				X					
SC 8	X		X												X		X				X					
SC 9	X		X	X													X				X					
SC 10	X		X		X												X				X					
SC 11	X	X	X	X	X												X				X					
SC 12	X		X	X	X	X	X										X				X					
SC 13	X							X				X					X				X					
SC 14	X				X	X											X				X					
SC 15			X	X					X	X				X			X	X			X					
SC 16	X		X	X	X	X	X	X	X	X	X						X				X					
SC 17	X		X	X	X	X	X	X	X	X	X	X	X		X		X			X	X					
SC 18	X								X	X	X					X	X				X					
SC 19									X	X	X						X				X					
SC 20	X				X	X			X	X	X						X				X					
SC 21	X				X		X	X				X	X				X				X					
SC 22			X	X					X	X	X			X			X				X					
SC 23	X		X	X	X	X				X	X						X				X	X	X	X	X	
SC 24	X		*		X	X				X	X						X			X	X					

\* not displayed but included in the settings page and data stream